


Operating Instructions

AUTOMATIC TELEPHONE
ANSWERING SYSTEM

EASA-PHONE

Model No. **KX-T1000BA**

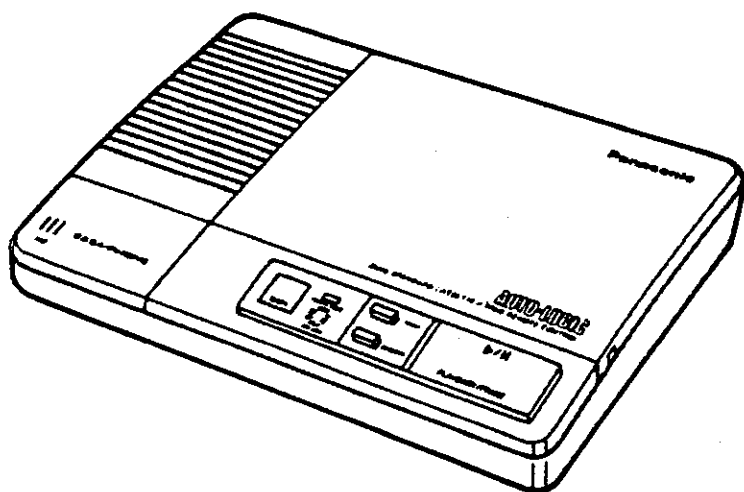

AUTO-LOGIC

Panasonic

Please read before use.

Contents

Location of the Controls, Preparation	2
How to Record an Outgoing Message	4
Setting Prior to Leaving	5
Listening to the Recorded Messages	6
How to Operate from a Remote Phone	7
Other Features	9
General Information	10


Accessories

- ① Micro Cassette Tape (MC-30) .. one
- ② AC Adaptor (KX-A11BA) one
- ③ Telephone Cord one

Warning:

When a failure occurs which results in the internal parts becoming accessible, disconnect the power supply cord immediately and return this unit to an authorized service center.


Location of the Controls

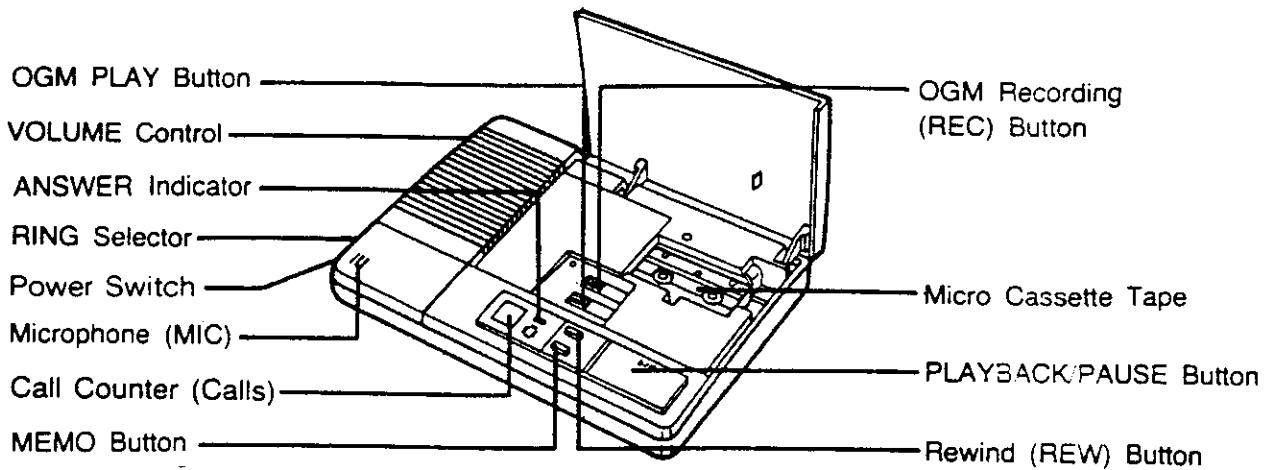


Preparation

CASSETTE TAPE INSTALLATION

Insert the cassette tape (MC-30).

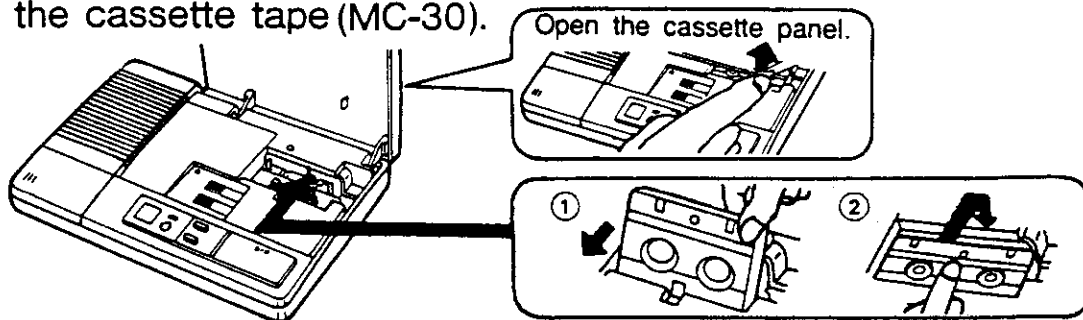


CONNECTION

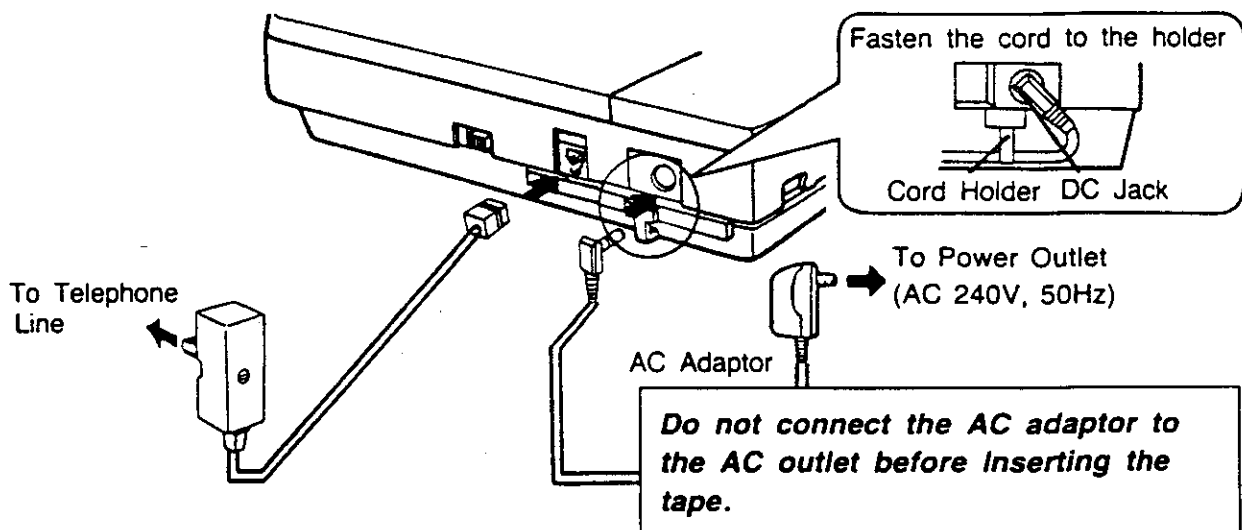

• **USE ONLY PANASONIC AC ADAPTOR KX-A11BA.**



• While operating the unit, the case of the AC Adaptor and the unit may feel warm, this is a normal condition.

INITIAL SETTINGS

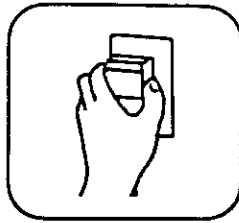


Connect the AC adaptor.

- The Call Counter will show “-” and the Answer indicator will flash.

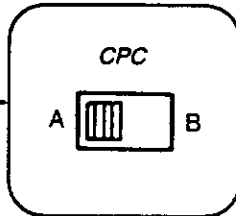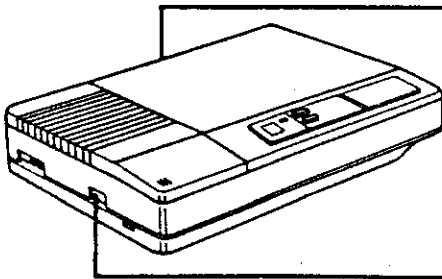

Calling Party Control (CPC)

Set to “A”. (no call waiting service line.) If you have call waiting Service or Incoming Messages are interrupted, set to B.

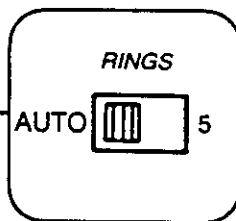

Number of Rings

- 5 The unit will answer a call on the fifth ring.
- AUTO ... See “TOLL SAVER” below on this page.

- After installing the tape, be sure to press the REW button until a beep is heard to reset the tape.
- If the tape is not inserted before plugging the AC adaptor, press the POWER switch to OFF to insert the tape, and then press the POWER switch to ON.

TOLL SAVER

The TOLL SAVER feature lets you avoid a toll charge when you call your unit and no messages have been recorded.

1 Set the number of rings to **AUTO.**

- If the unit does not pick up on the forth ring, hang up immediately. This means that you have no messages and you have saved a toll charge.

■ The unit picks up **on the third ring**:

It means that at least one message has been recorded.

- After you have played back all the messages from a remote phone, **the unit will pick up the next call on the fifth ring**. If the unit picks up on the third ring, it means that at least one new message has been recorded.

How to Record an Outgoing Message (OGM)


Before operating your unit, you must record an Outgoing Message (OGM). The OGM will inform the calling party of your absence and your message.

RECORDING THE OGM

NOTE:

If you pause for over 2 seconds while recording, you will hear a series of warning tones (6 beeps) and the Call Counter will show "E". If this happens, start with step 1 again after the unit stops rewinding.

- It is recommended to place an announcement in the OGM as follows; "You have 1 minute for ICM recording."

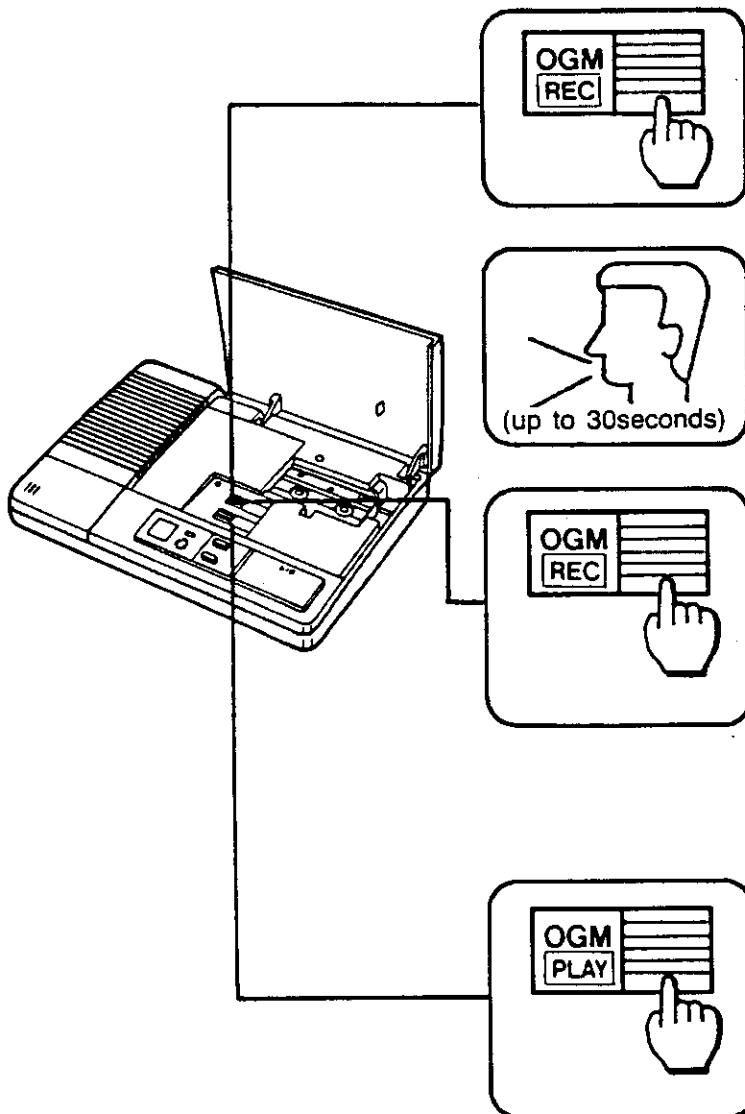

1 Press **OGM REC**.

- A series of short beeps will sound followed by a long beep.

2 After the long beep, speak immediately, clearly and loudly into the microphone (MIC) approximately 8 inches away.

- The recording time is up to **30 seconds**.
- The Call Counter will show "0", "1", "2", "3", "4", "5", "6", "7", "8", "9", each flashing three times.

3 When recording is finished, press **OGM REC** again.

- 10 seconds later, the unit will rewind the tape to the beginning and be in the answering mode to be ready for Incoming Calls.

CHECKING YOUR OGM

Press **OGM PLAY**.


- The unit will rewind the tape to the beginning to play back the OGM.
- To stop the operation while playing back the OGM, press the **OGM PLAY** button.

SAMPLE OGM

"Hello, this is the Smith residence. We cannot come to the phone right now. If you leave your name, phone number and message, we will return your call. You will hear a series of short beeps and then a long beep will be heard. Speak after the long beep. You have 1 minute for recording."

Setting Prior to Leaving

RECORDING THE CALLERS' MESSAGES

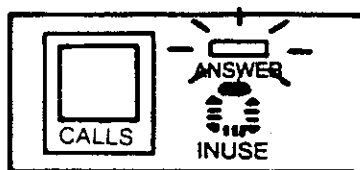

Check the following points prior to leaving.

- ① The OGM is recorded.
- ② The Answer indicator is lit and the Call Counter shows "0".

When the telephone rings, the unit will play back your OGM, then it will record the callers' messages on the tape.

- If you do not want the unit to answer the call, press the POWER switch to OFF.

PREPARING THE ICM TAPE

To record future messages from the beginning of the ICM part of the tape

Leave the unit as it is.

A new incoming message will be recorded erasing the previous messages from the beginning of the ICM part of the tape.


To record future messages after the last message

Press PLAYBACK/PAUSE and REW simultaneously.

- 2 seconds later, the unit comes into operation with the Call Counter at "0" and with the Answer Indicator lighting.

The future Incoming Messages will be recorded after the messages you have saved.


The cassette can be erased even if the record-prevention tabs have been removed.

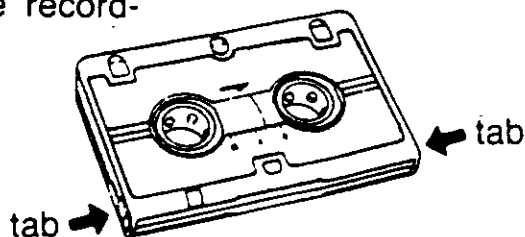

Listening to the Recorded Messages

- When Incoming Messages have been recorded, the Answer Indicator will flash and the number of messages recorded will be indicated on the Call Counter.
- The call counter remains at "9" even with more than 9 messages recorded. After the last message is played back to the end, 3 beeps will sound and the tape will automatically rewind to the beginning of the ICM part of the tape.
- In case of a power interruption, the call counter will show "-" after the power is restored.

LISTENING TO THE MESSAGES

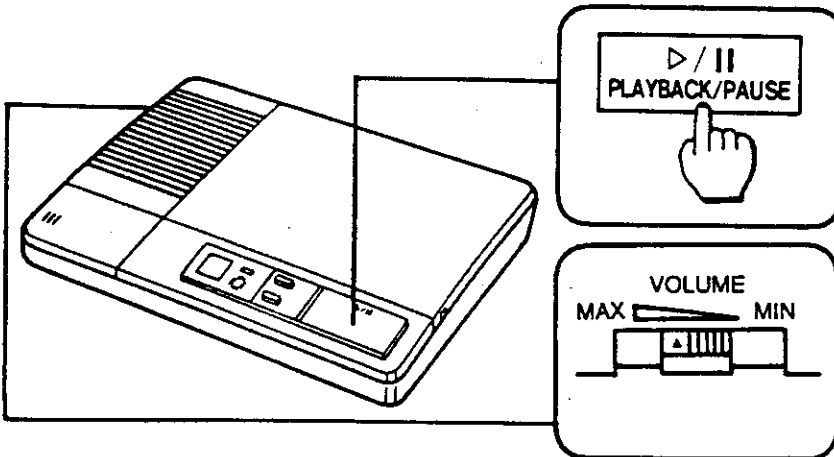

Press **PLAYBACK/PAUSE**.

- The unit will rewind the tape and play back the messages.

The playback volume is adjustable using the **VOLUME** control (left side on your unit).

AUTO-LOGIC (One-Touch Operation):

Pressing the **PLAYBACK/PAUSE** button automatically executes operation as follows:

- ① The unit will rewind the tape.
- ② Plays back the messages.
- ③ 3 beeps will sound after the last message.
- ④ Rewinds the tape.
- ⑤ Prepares for new message recording from the beginning of the ICM part of the tape.

New messages will be recorded over any old messages.

To save the messages, follow the procedure on the page 9.

- To stop the tape temporarily, push the **PLAYBACK/PAUSE** button. The Call Counter will flash. To restart, push it again.
- If you receive a call while playing back, push the **PLAYBACK/PAUSE** button and lift the handset.
- To listen to the message again during playback, push the **REW** button. The unit will start playing back immediately, when you release the button.
- To record new messages from the beginning of the ICM part of the tape, push the **REW** button until the tape stops and a beep sounds.

How to Operate from a Remote Phone

You can retrieve the recorded Incoming Messages from a remote location with a tone phone by simply pressing your own remote code number during the OGM.

THE REMOTE CODE NUMBER


The remote code number is a combination of three digits found at the bottom of the unit. A remote tone phone can gain access through any combination or repetition of these three digits.

(e.g. If the numbers 147 are given, the combination will be as follows; 111, 147, 444, 471, 714.....ETC)


Refer to the remote code label on the bottom of the unit.

PLAYING BACK MESSAGES

You can listen to the recorded messages.

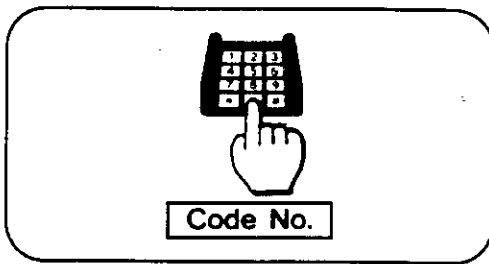

- 1 Call your unit, and press each keypad of any combination of your remote code number (composed of 3 digits) for about 1-2 seconds during the OGM.
 - The unit will rewind the tape, and you will hear all the messages on the tape.
 - 3 beeps will be heard after the last message.

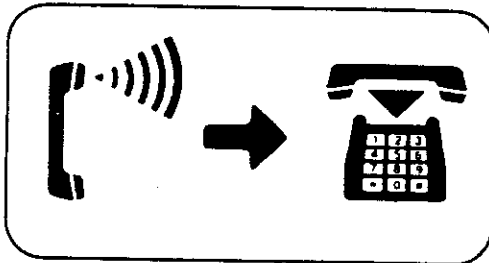


- 2 Hang up.
 - Future Incoming Messages will be recorded after the last message.

NOTE


- When you press your remote code number, the second and third digits should be pressed within 6 seconds after the first digit.
- The unit may not respond if a remote touch tone phone (such as mobile telephone, etc.) produces tones that are too short to activate the unit.

LISTENING TO THE SAME MESSAGES AGAIN DURING THE PLAYBACK (BACK SPACE)

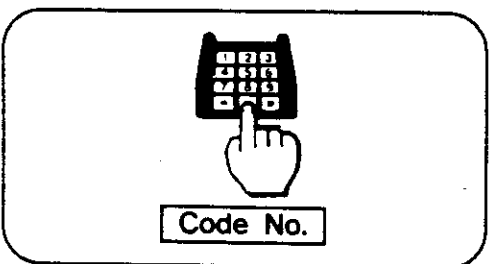

- Press any one of the 3 digits in your code number during the playback.
- The tape will rewind for approximately 15 seconds corresponding to playback time.

RECORDING NEW INCOMING MESSAGE FROM THE BEGINNING OF THE ICM (REMOTE RESET)

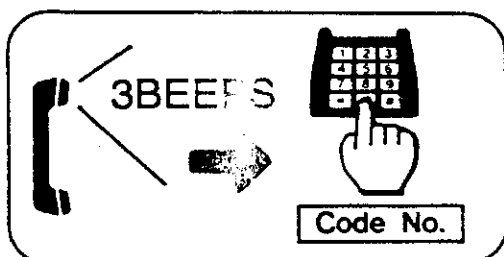


Immediately after 3 beeps sounding at the end of ICM playback, press any one of the 3 digits of your remote code number.


- After the beep, rewinding will be started and the completion of the unit resetting will be signaled by a beep.
- To listen to the messages again after resetting, press any one of the 3 digits in your remote code after long beep sounding. The unit will rewind the tape, and you will hear all messages again.

LEAVING YOUR MESSAGE AFTER REVIEWING ALL THE MESSAGES (MARKER MESSAGE)

After reviewing all the messages, you can leave your index message on the tape to be heard by anyone using the unit.

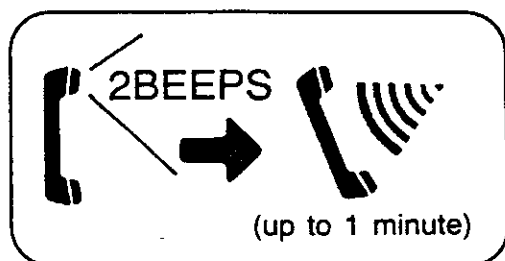


- 1 Start to talk right after the last 2 beeps.
 - The recording time is up to 1 minute.
- 2 When finished, hang up.

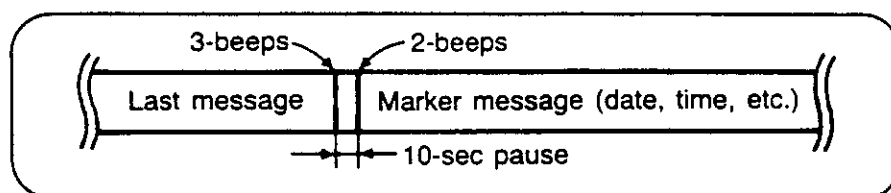

SETTING THE ANSWER MODE WHEN THE UNIT IS OFF

You can easily set the Answer mode from a remote phone.

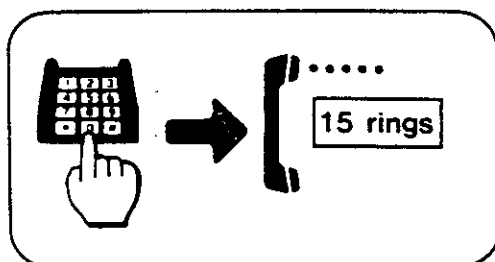


- 1 Call your unit.
- 2 Wait for 15 rings.
 - OGM will be heard and hang up.
 - The unit will be ready to answer the next phone call.

Other Features

RECORDING A MESSAGE MEMO



It is very handy to record a message in case you want to leave word with your family members before your going out.

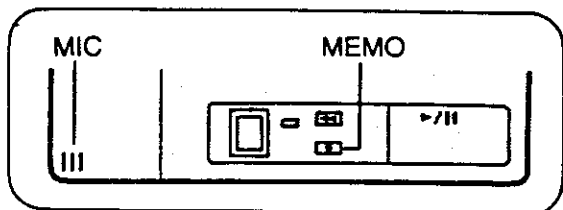

- 1 Press **MEMO** until a beep is heard.
 - A series of short beeps will sound followed by a long beep.
- 2 **Speak** into the MIC.
- 3 When recording is finished, press **MEMO** again.

- The ANSWER indicator will flash to show your message has been recorded, and the unit will then be ready to answer phone calls.
- The new messages will be automatically recorded after your memo.

SAVING THE RECORDED MESSAGES

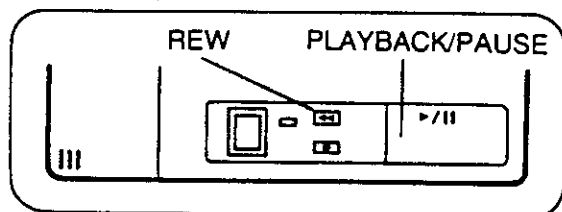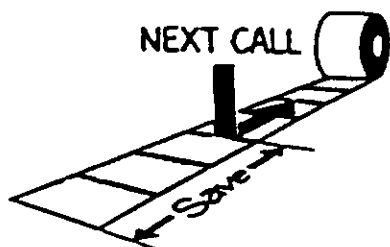


You can save the desired messages.

- 1 Play back the tape through the messages you want to save. If the tape is not played back after 3 beeps are heard, press the **PLAYBACK/PAUSE** again before **ANS/CALLS** indicator lights.
- 2 Press **PLAYBACK/PAUSE** to pause.
- 3 Press **PLAYBACK/PAUSE** and **REW** simultaneously.

- 2 seconds later, the unit will rewind the tape and be ready to answer calls.
- The future Incoming Messages will be recorded after the messages you have saved.

MONITORING THE INCOMING CALLS (CALL SCREEN)

While an Incoming Message is being recorded, you can hear it.

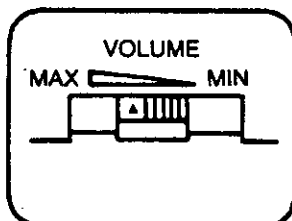

Adjust the volume control.

If you want to talk to the caller during the ICM recording, lift the handset and speak. The unit will stop recording and will get ready to record the next call.

Maintenance


Because the head and capstan assemblies are in contact with the tape, dirt and residue from the tape can easily adhere to these parts, causing distortion. These parts should be cleaned periodically in the manner described below.

- **Clean the head surface, pinch roller and capstan with a cotton swab.**

If these surfaces are extremely dirty, dampen the cotton swab with alcohol.

NOTES:

- Do not bring magnetic or metal objects, such as a screwdriver, near the head assemblies, and such objects could magnetize the heads.
- Do not oil any part of the unit.

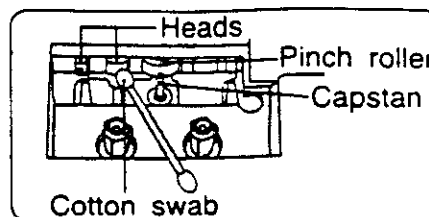

Others

- If there is any trouble, disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your Panasonic phone repaired. If the known working telephone does not operate properly, consult with a telephone company.
- Do not use benzine, thinner, or similar solvents. Do not use abrasive powder to clean the cabinet. Wipe it with a soft cloth.
- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps, motors and television. These noise sources can interface with the performance of the unit.
- The unit and the cassette tape should be kept free of dust, moisture high temperature and vibration, and should not be exposed to direct sunlight.
- Never attempt to insert wires, pins, etc. into the vents or other holes of this unit.

Cassette Tape

- For optimum sound quality and performance, we recommend you to **use side two after six months and to replace the tape every year** supposing that the unit answers about ten calls a day.
- Never place a cassette tape near a magnetic source, such as a magnet or a TV set, because it may erase the tape.
- Slack in the tape can be tightened by rotating the tape with an object like a tapered part of a pointed pencil.

QUICK REFERENCE CARD

FOR TONE REMOTE CONTROL

- To set the unit to the answer mode from a remote location when the unit is in the off position.
 1. Dial the telephone number and wait for 15 rings.
 - The unit will set to the answer mode and will play the OGM.
 2. Hang up.
- When pressing your remote code number, press each keypad for about 1-2 seconds.

Troubleshooting Guide

Problem

Cause & Remedy

The unit has been set to the Answer mode, but no Incoming Messages are recorded.

- The cassette tape is broken (cut, worn out or twisted), not inserted or full recorded. Replace it with a new one and re-record a new OGM.
- The OGM is recorded improperly. Record a new OGM.

I press the button of a remote phone, but the unit does not respond.

- Make sure that you are using your own code number.
- Press each keypad for about 1-2 seconds.
- The unit may not respond if a remote touch tone phone (such as mobile telephone, etc.) produces tones that are too short to activate the unit. Please change the telephone.

Some Incoming Messages have not been fully recorded.

Change the CPC to "B".

Dial the telephone number with a tone telephone only.


Press your code number : The unit will play back.
during playback OGM.

- **To Back Space**, press any one of the 3 digits in your code number during the playback.
- **To record the ICM from the beginning of the tape**, press any one of the 3 digits in your code number after 3 beeps.
- **To save the ICM**, hang up after playback.
- **To record a marker message**, speak after hearing 3 beeps and then 2 beeps.

Your Code No. _____

CASSETTE PANEL

If the panel comes off, replace it by pressing in parallel as shown.

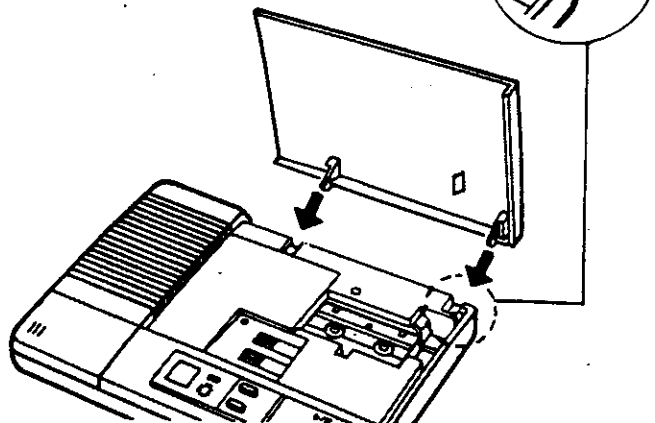

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

Printed in Japan

PQQX6198ZB S0290S2062T (XNZ)